

FLOAT FRAME

BRACKETS

Available through

CaraGreen

Healthy Building Materials

www.caragreen.com • 919.929.3009

info@caragreen.com

STRAIGHT ARM BRACKET | INSTALL GUIDE



1. Select the Straight Arm Bracket size needed using the dimensional drawings provided



2. Locate studs in the wall and design your layout




3. For each Straight Arm location, cut the drywall on each side of the stud to allow the mounting flanges to slide in on each side of the stud




4. Temporarily mount the Straight Arm using drywall screws and the small holes in the face of the flange



5. Adjust Straight Arm to be in plane and level

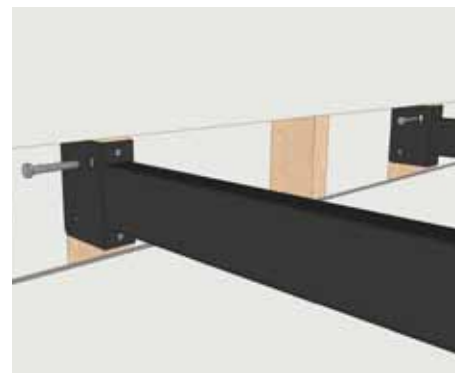

6. Permanently fasten the Straight Arm to the studs using zinc 5/16" x 1-3/4" lag screws in the large holes on each side of the flange

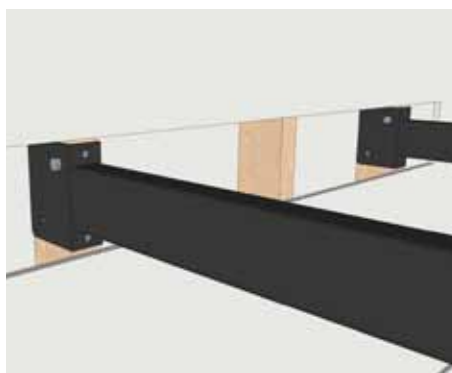

7. Tighten all zinc 5/16" x 1-3/4" lag screws



8. Close holes, refinish drywall, and paint as needed



9. Secure countertop surfacing to brackets

FLOAT FRAME

BRACKETS

STRAIGHT ARM BRACKET | GUÍA DE INSTALACIÓN

Available through

CaraGreen

Healthy Building Materials

www.caragreen.com • 919.929.3009

info@caragreen.com



1. Elija el tamaño de Straight Arm Bracket con los dibujos dimensional provistos



2. Localice los broches en el muro y diseñe el plano




3. Para cada Straight Arm lugar, corte el panel de yeso en cada lado del broche para permitir las pestañas a deslizar en su puesto en cada lado del broche




4. Temporalmente monte el Straight Arm con los tornillos de yeso y los agujeros pequeños en la cara de la pestaña



5. Ajuste los Straight Arms hasta están llanos

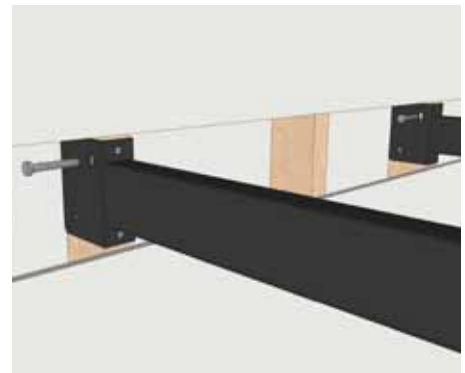

6. Permanentemente ate los Straight Arms a los broches con un tornillo de cabeza cuadrada en los agujeros largos a cada lado de la pestaña

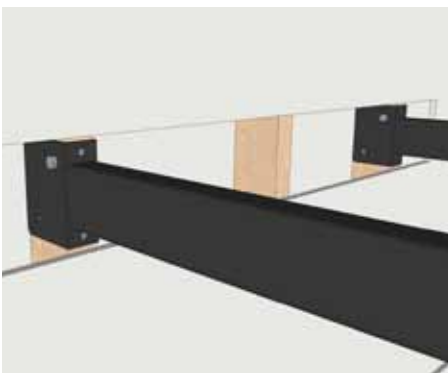

7. Refuerce todos los tornillos



8. Cierre los agujeros, restaure el panel de yeso, y pinte como necesite



9. Abroche la encimera o el revestimiento a los soportes